

# Amico Alert-4 Series LCD Ethernet Master Alarm



## General Specifications:

The Amico LCD Ethernet Master Alarm system shall be an Amico Alert-4 series, complete with a five-year warranty.

Each LCD Alarm shall be microprocessor based and field adjustable.

Ethernet capable for convenient viewing, remotely or wirelessly, anywhere in the building.

Monitor up to 30 channels.

Each channel can be labelled with up to 16 characters per line. Alarm conditions can be selected as normally open or normally closed.

Channels can be grouped together or separated using Amico Master Configuration Software.

When channels are in normal condition, the channel will illuminate in green.

When a channel is in fault condition, an alarm will sound and both the channel heading and the channel in fault will illuminate in red. Heading will display channel status in fault.

Maintenance mode for easy troubleshooting: press and hold the mute button for 20 seconds and the display will show the terminal port for each channel.

Repeat alarm function shall be capable of turning on the buzzer again after a preset time, if the fault condition has not been rectified.

Dry contact for remote monitoring.

The Amico Alert-4 Series LCD Master Alarm is Ethernet ready, for use with Internet Explorer, Google Chrome and Safari.

Amico products comply with NFPA 99, CSA Z7396.1 and CSA Z305.1.

## Ethernet Ready

View your alarms on your computer or mobile device.




## Features:

- The LCD Alarm shall be capable of displaying an exact replica of the alarm on a computer screen via the facility's ethernet or internet. In addition, an exact image of the alarm can be displayed on a mobile device.
- The LCD Alarm will update its status every second.
- Easy access via Amico Medas App (Apple and Android).
- Web Audio Enable: Web Audio will trigger when alert occurs via ethernet.
- Unlimited records of history log to keep track of alert history for easy troubleshooting.

## Project

# Technical Specifications

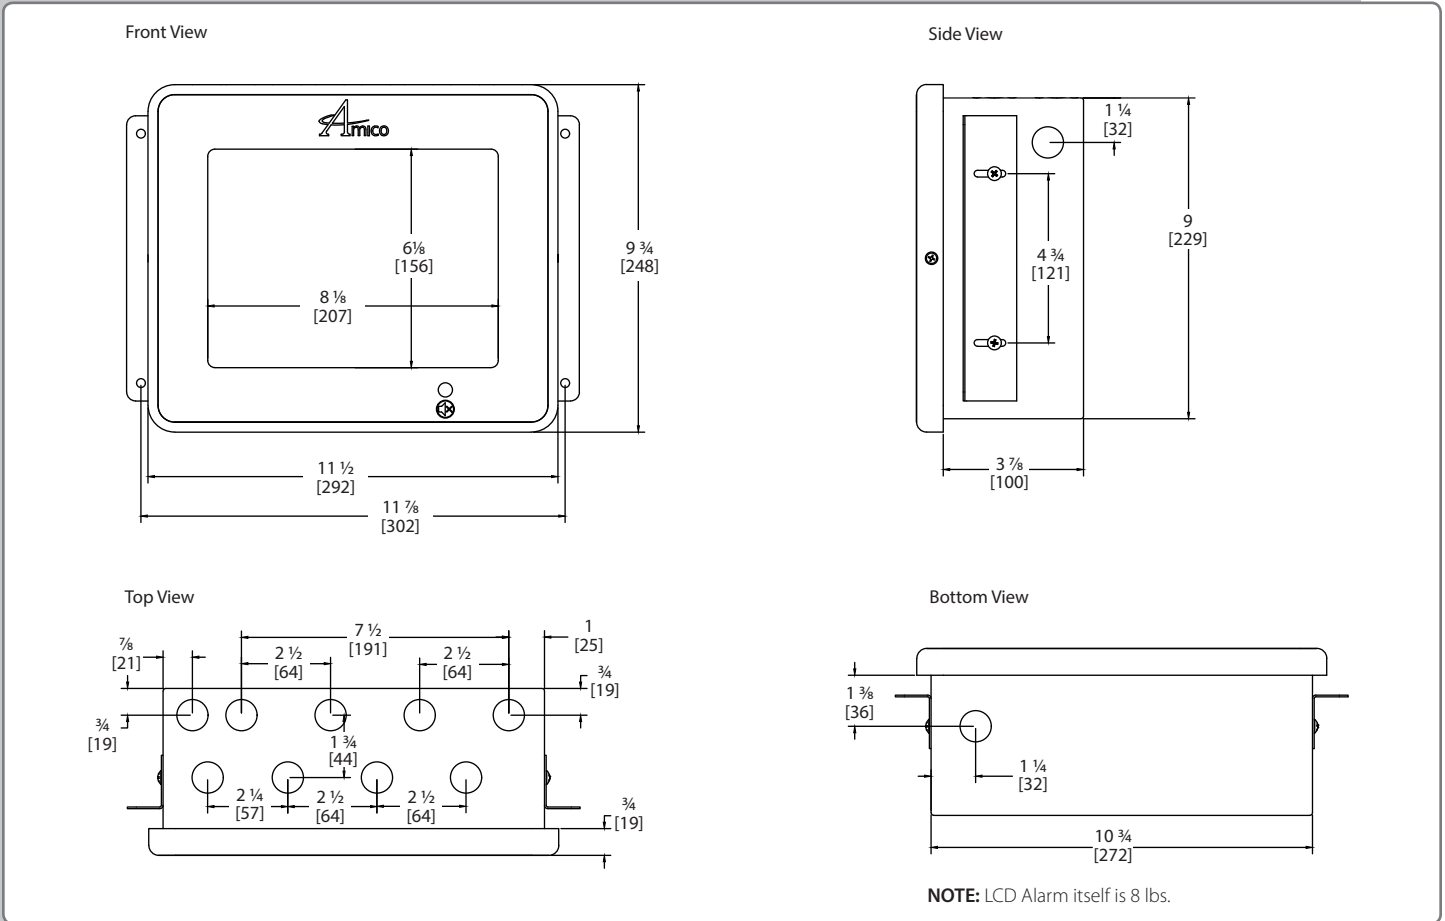

## Model Number

**A4M-X-XX**


The "X" Represents the Language:

English = E  
 Spanish = S  
 French = F

The "XX" Represents the Number of Points:

1 to 10 Points = 10  
 1 to 20 Points = 20  
 1 to 30 Points = 30


# Amico Mobile Eco System App

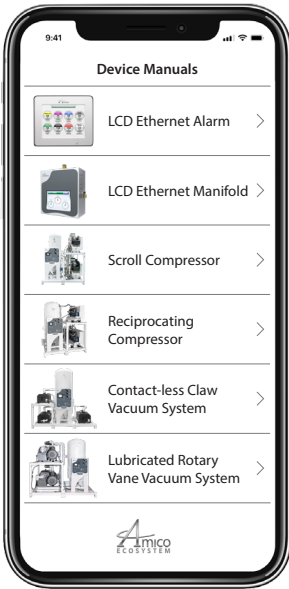

Downloads



Actual Display

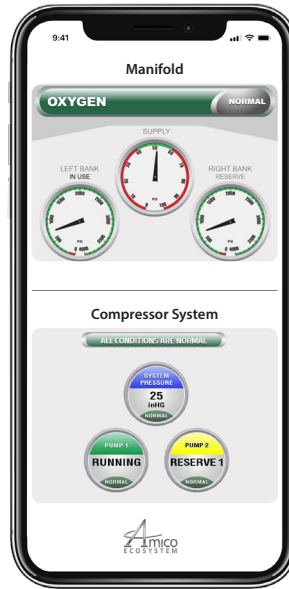

Actual Display

- Features:**
- Email and Text notification
  - Easy access via Amico App, will have peace of mind knowing medical alarm always connected.

Capable of sending email or text messages when in fault condition. Email and text messages will also provide panel URL and location installed for easy access. By clicking URL, an exact image of the panel screen will display on mobile devices.

Amico Mobile Eco System App is available on the Apple App Store & Google Play to download. It will provide an exact and instant visual representation of the alarm conditions to eliminate the need for nurses to call maintenance personnel in the event of a gas outage. The App will also help maintenance personnel to localize the outage for quicker resolution.

Amico Mobile Eco System App is available on the App Store & Google Play.



**AMICO MOBILE ECO SYSTEM APP**  
Download Now!



Distributed By:



<https://www.medicalgassupplier.com/product/amico-alert-4-lcd-ethernet-master-alarm-2/>